

Getting the Most out of Your ActiveKEY

Keep your ActiveKEY within acceptable operating temperatures

Your ActiveKEY is designed to operate in temperatures between -4° and 131°F (-20° and 55°C). Low- or high-temperature conditions can shorten battery life or cause an ActiveKEY to malfunction.

If the ActiveKEY is below 32°F (0°C) or above 113°F (45°C), the battery will not charge. For maximum battery life, store your ActiveKEY at room temperature.

DO NOT leave an ActiveKEY in hot environments, including a car, because temperatures in parked cars can exceed this range.

Safe Mode

If your ActiveKEY reaches a temperature over 131°F

(55°C), the key automatically goes into safe mode. If you see the following message on your ActiveKEY: MAXTEMP EXCEEDED SAFE MODE ON, your key has reached a high temperature and cannot be used until it cools down.

Showing Notification On/Off Feature

This feature allows you to extend your ActiveKEY's battery life by turning off the automatic Showing Notifications on your ActiveKEY.

To disable Showing Notifications, press the on/off button on your ActiveKEY. Scroll to **Preferences** and press **Enter**. Press **1** for Notification. Press **2** to turn notifications off and then press **Enter**.

Battery Conservation Feature

The ActiveKEY automatically conserves battery by receives showing notifications in real-time 8am-8pm (9am-9pm Daylight Saving Time). From 8pm-8am, the ActiveKEY will still transmit showing activity, but it will not receive showing notifications until 8am. Note that email notifications will still be sent in real-time.

